


Valve position indication

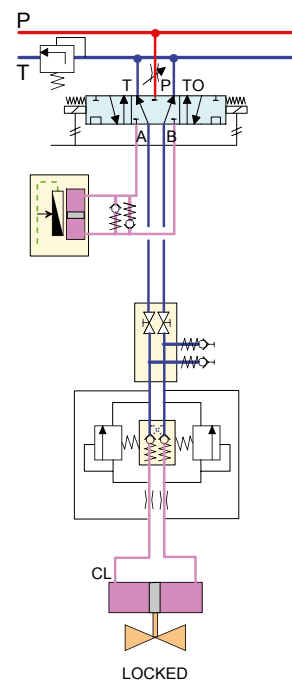

Indirect continuous indication Volumetric indicator installed in Solenoid valve cabinet

Continuous indication by measuring the oil volume distributed to/from the actuator by using a volumetric indicator.

Pressure and temperature independent.

No additional cabling needed.

See datasheet Control Circuit D36 for details.